



### **Installation of model A & C**

- A) Check with your municipality regarding the regulation height of your fence and whether a permit is due. Check with Info-Excavation at 514-286-9228 to identify any pipes or underground spinings
- B) Locate the terminals in your field to be sure that the fence will be erected on your game. Plant stakes limits of your land and their attach a rope throughout your land. It will guide you to your holes and poles.
- C) Check that your land is leveled

#### **Posts installation**

- A) First dig holes 8 inches in diameter and 40 inches deep to poles that form the corners or ends of your project. then position and dig poles doors guiding you on the rope. (see \*\*\*). Dig hole other intermediaries keeping a distance maximum of 82 inches between them. ( Reward of the most equal sections as possible . )
- B) Starting with the end posts and corner , fill the holes of a consistent preparation of concrete and insert the post. The latter should be level , perpendicular to the ground , and released at a height equal to or greater than that your fence (4, 5 or 6 '). Do the same for utility poles and doors (\*\*\*) For the latter, make sure you have a space of 42 , 55, 84 or 110 inches between the posts according to the model chosen door).
- C) Measure the distance between the poles and order sections of your fence . Send us your measurements by fax or email.

#### **Sections installation**


- A) Determine the highest part of your property (if there is a slight slope) and begin the installation at this location
- B) Screw the first to post BRACKET with self-drilling screws included. the sections should be found to a maximum height of 2 inches (5 cm) of sol.
- C) Insert BRACKET at the other end of the screw section and the other section pole of keeping the level perpendicular to the ground .. Continue for other sections. (For non-level terrain, the installation method called stair should be used. See Figure 2).
- D) Install doors in accordance with the instruction guide provided with the hinges

#### **For more informations**

**3318 Jacob Jordan, Terrebonne, Québec, J6X 4J6 Tel : 450-968-1000 Fax :450-968-1009**

[WWW.cloturesfrontenac.com](http://WWW.cloturesfrontenac.com)

**FIG 1**

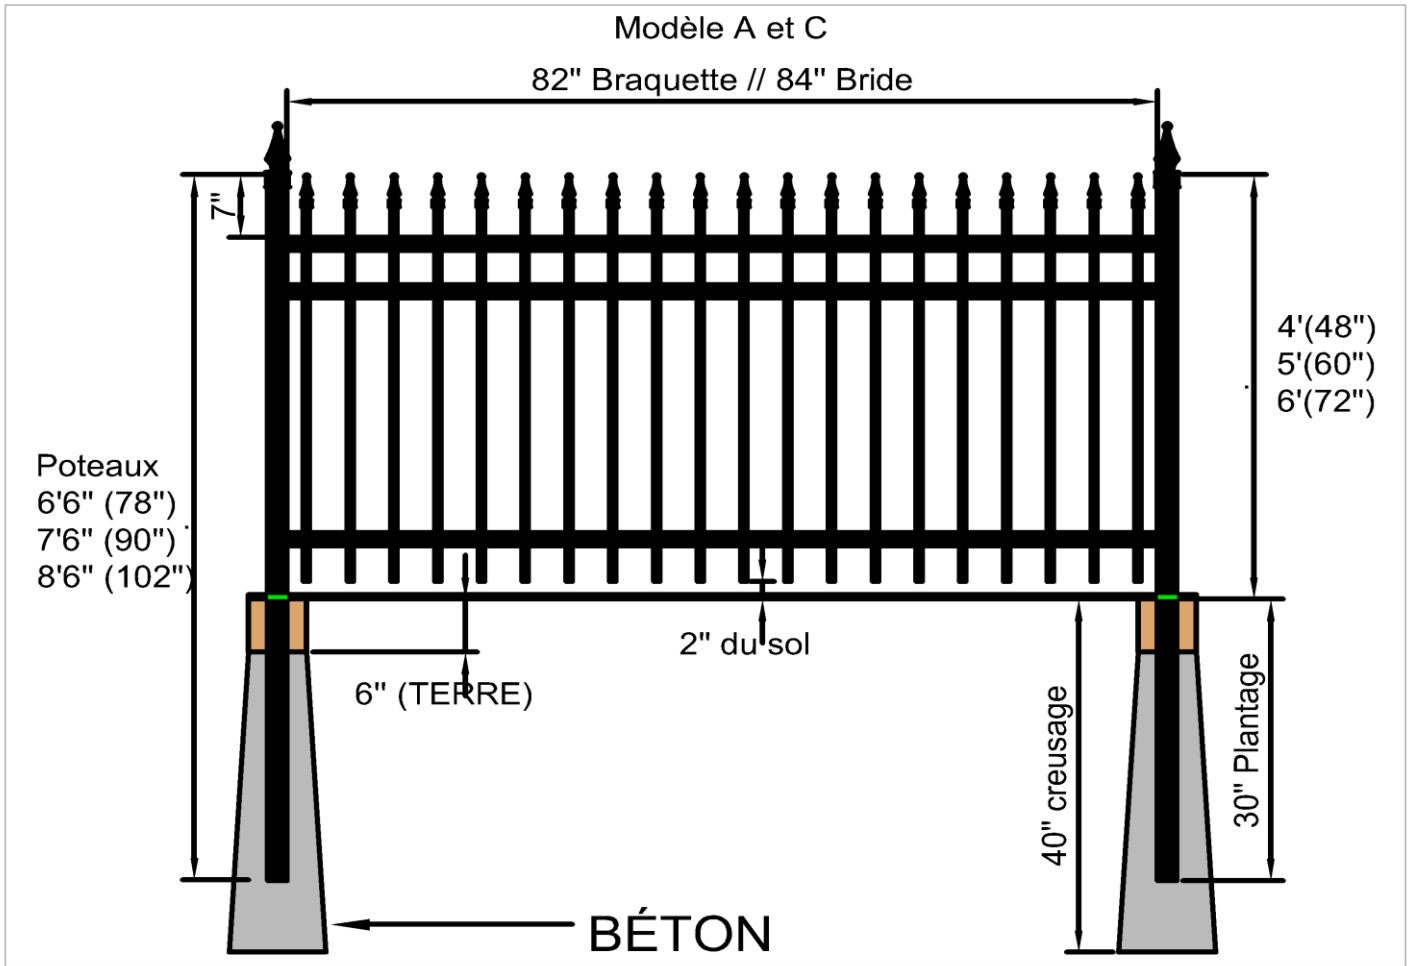

**FIG 2**

