


## Installation of ornamental fence model B & D

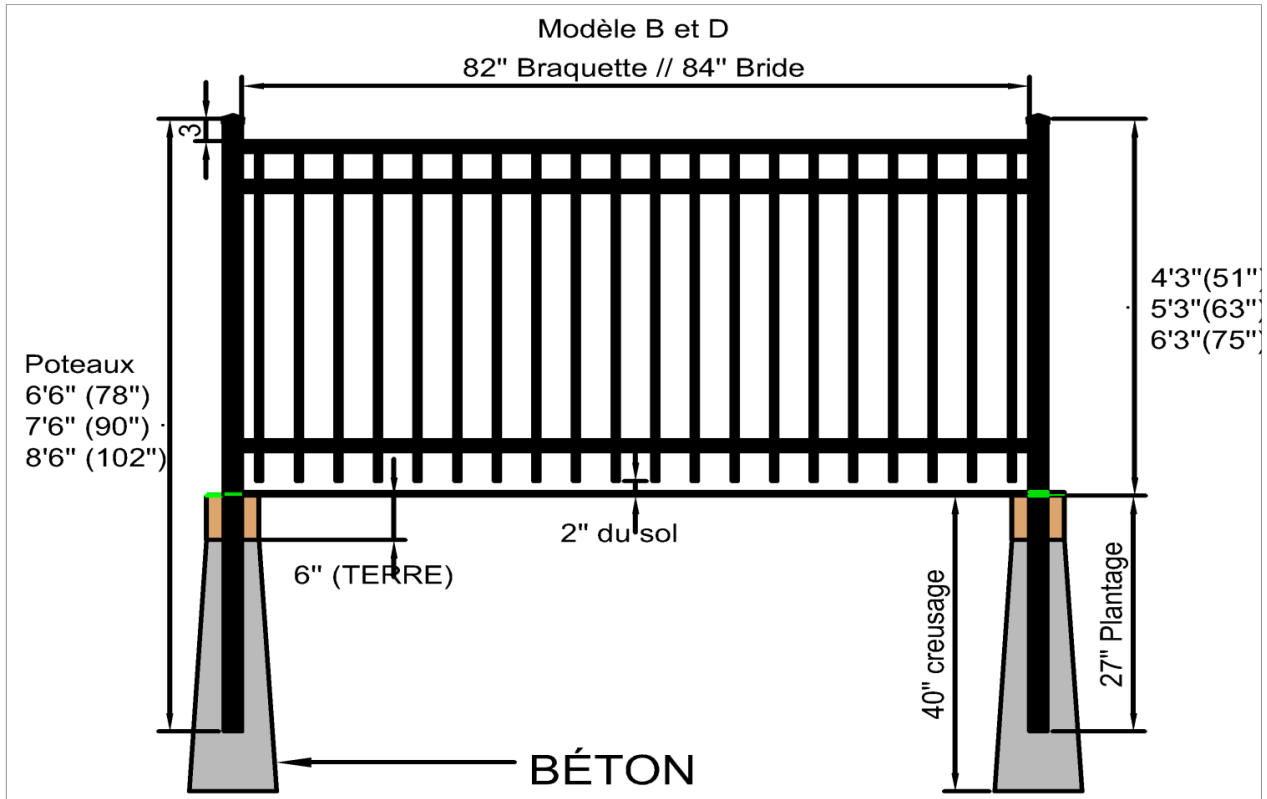

Before commencing work it is important to :

- a) Locate the terminals in your field to be sure that the fence will be erected on your part and check the municipality to know the laws in your location.
- b) Please check with your municipality to the next height for the fence and whether a permit is due.
- c) Check with Info-Excavation 514-286-9228 to identify any pipes or Wirings in land .

### POST INSTALLATION

- 1) First Dig holes for corner posts and / or end at a depth of 40 inches. Fill the hole with concrete preparation , insert the post and be sure to leave out the posts a height of 4'3 " , 5'3" or 6'3" according to the selected taking care that the poles are at the level and perpendicular to the ground . Repeat for all other corner posts and / or end and the poles doors that you had previously marked.
- 2) Attach a rope to the end posts and draw a straight line. Dig post holes other guiding you on the rope and plant poles keeping a maximum length of 80 inches between them.
- 3) Measure the distance between each pole by identifying with the letters a, b, c etc. . for each and order sections giving your measurements according to the model you have chosen.

### INSTALLATION OF SECTIONS

- 4 ) Screw the first to post BRACKET with self-drilling screws included . Sections should be 2 inches ( 5cm ) from the floor . Then insert the other end of the section in the bracket and screw there turn in the post, make sure at this stage that there is a BRACKET inserted in each of the cross Continue for each of the other sections. For non Nivelles land, the so-called staircase method should be adopted.
- 5) Install your doors following the instruction guide provided with the hinges.  
**For more information, please contact Fences Frontenac 450-968-1000 .**