




Clôtures Frontenac

3318 Jacob Jordan, Terrebonne, Pq
Tél: 450-968-1000 Fax: 450-968-1009
www.cloturesfrontenac.com
vente@cloturesfrontenac.com


INSTALLATION OF A ARCHE

Facilities include each side
and the top of the arbor,
6 butterflies ornaments,
2 aluminum bars,
and screws for assembly.

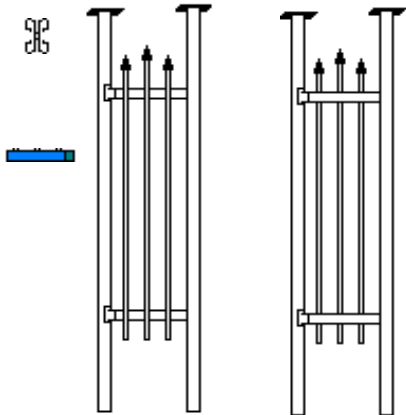

ASSEMBLE

Screw the top of the arbor on
sides with the screws provided therefor
Make sure you have 42 or 55 inches
between the vertical post

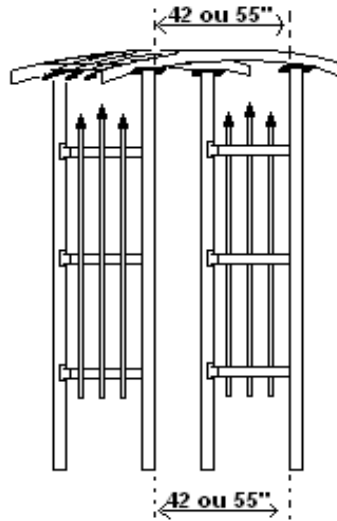


DIG

-Use the arbor assembly to
determine the place where you have to dig.
Dig holes about 8 inches
diameter and 42 inches deep.

POSITION

Prepare a mixture consisting of concrete and
pour into the holes. Position the arbor
vertically below the pressing
balusters on aluminium 2 X 2 profiles.
Using a recommended level.

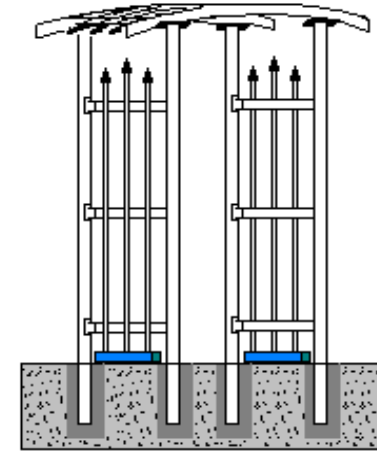

Screw butterflies ornaments and install
the door guiding you on the instructions
supplied with the hinges.

